


Cherokee to Wrangler T-Case Clocking Template. NP231 Transfer Case

Measure this dimension before using template. It must measure 2" or template will NOT be accurate!

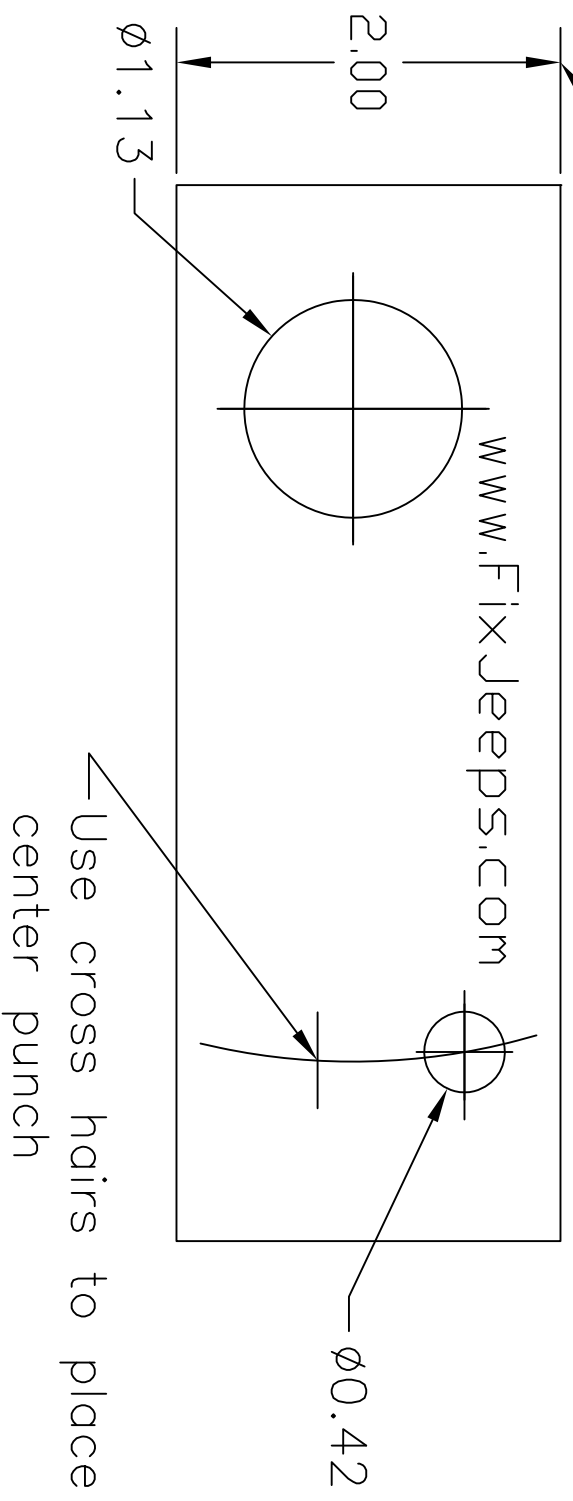

See www.FixJeeps.com for how to use this template. Also download another copy for free if needed.

Scale: 1:1			